




## Camera Interface Module and Illumination Controller

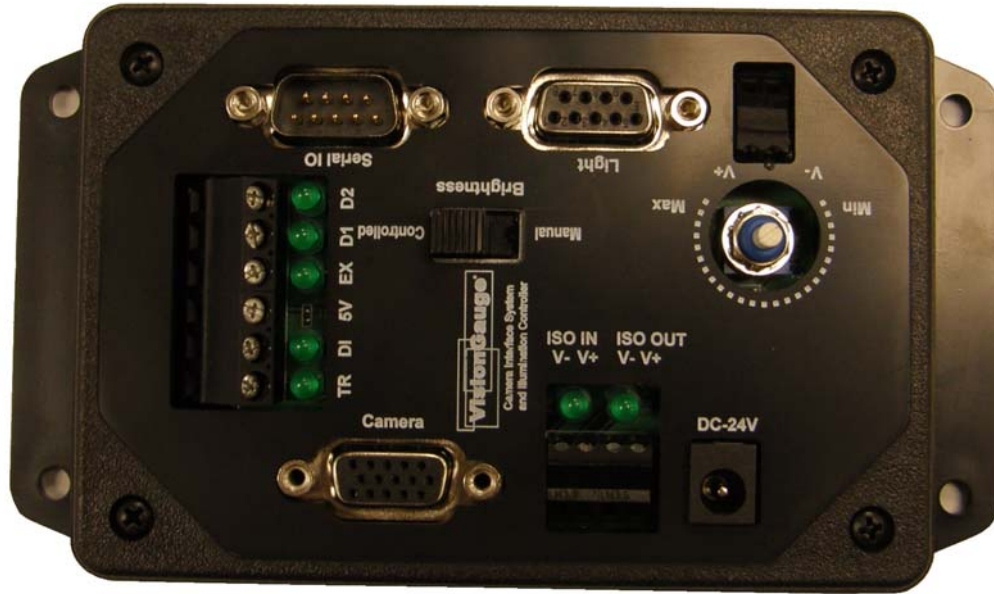

The VisionGauge® Camera Interface Module and Illumination Controller can be used either in conjunction with any of the Sony Smart Cameras or as a “stand alone” illumination controller.

When used in conjunction with any of the Sony Smart Cameras, the VisionGauge® Camera Interface Module and Illumination Controller:

- Powers the camera
- Breaks out all of the camera’s I/O and Serial signals
- Controls the illumination

When used as a “stand alone” illumination controller, the VisionGauge® Camera Interface Module and Illumination Controller can be used to:

- Manually control the illumination intensity (using a trim pot)
- Control the illumination intensity via a computer’s output (0-5V).

The VisionGauge® Camera Interface Module and Illumination Controller is compatible with 24V continuous LED illuminators and uses an industry-standard 9-pin “D” connector (i.e. “DB-9 female” on the controller).

The VisionGauge® Camera Interface Module and Illumination Controller includes the required 24V power supply and is available as either an enclosed or a board-level product.

### Distributed By:



### Developed By:

**VISIONx Inc.** Tel: (514) 694-9290  
274 Lakeshore Fax: (514) 694-9488  
Pointe-Claire, QC Email: info@visionxinc.com  
Canada H9S 4K9 Web: www.visionxinc.com